

Mounting instructions

www.koolair.com







FILTER SIZES

- 305 x 610 x 68 mm

- 915 x 610 x 68 mm


- 610 x 610 x 68 mm

- 1220 x 610 x 68 mm


DIFFERENT PANEL COMBINATIONS

KTF SIZE	OPENING		OVERALL DIMENSION					OUTLET			No. OF	OVERALL DIMENSION	FILTERS
	L1	H1	L	x	Н	X	Α	L	х	Н	PIECES	(WITH FILTERS)	
2,5x1,5	2680	1280	2730	х	1330	Х	450	1000	Х	200	1	212	(12,6)*3+(3,6)*2
2x2	2010	1950	2060	х	2000	Х	450	1550	Х	200	2	212	(9,6)*4+(6,6)*2
2,5x2	2560	2010	2610	Х	2060	Х	450	1550	Х	200	2	257	(9,6)*2+(12,6)*4
3x2	2925	2010	2975	Х	2060	Х	450	1800	Х	200	2	277	(9,6)*7+(12,6)*1
2,5x2,5	2680	2620	2730	Х	2670	Х	450	2100	Х	200	2	347	(9,6)*10
3x2,5	3230	2680	3280	Х	2730	Х	450	2350	Х	200	4	410	(9,6)*2+(12,6)*8
3,5x3	3350	3230	3400	х	3280	Х	450	2950	Х	200	4	478	(12,6)*12
4x3	4020	3230	4070	Х	3280	х	450	3580	х	200	4	561	(12,6)*14+(3,6)*2

DRAWING

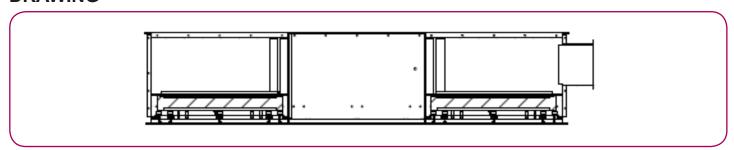

FILTRATION CEILING SIZES

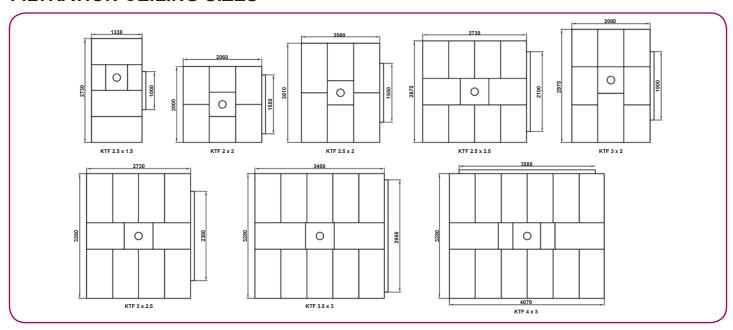



ASSEMBLY PALLETING

Packing example

The fasteners required are inside the space for the scialytic lamps.





CAREFUL!! Once unpacked, put wooden blocks in place to avoid damaging the supports.

CLEAN THE SILICONE CONTACT SURFACES




Apply silicone to all joint areas of the assembly.

Clean all joints of the assembly using 90° alcohol.





SILICONE APPLICATION METHOD

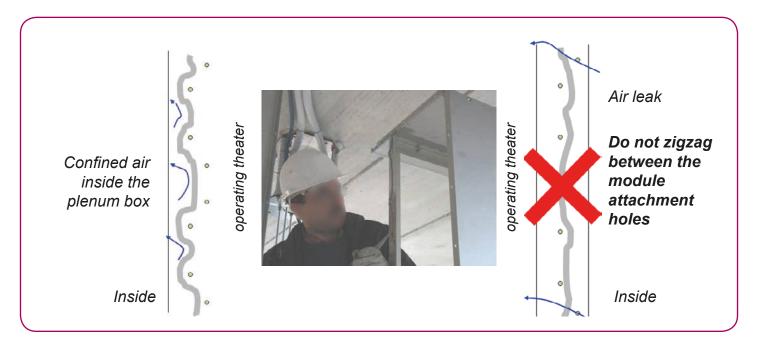

MODULE ASSEMBLY



Leave the unit resting on wooden blocks to avoid damage in the ceiling supports.






Place airtight rivets on the inside.

Screws with nuts on the outside.






INTERIOR SILICONE APPLICATION AT CEILING

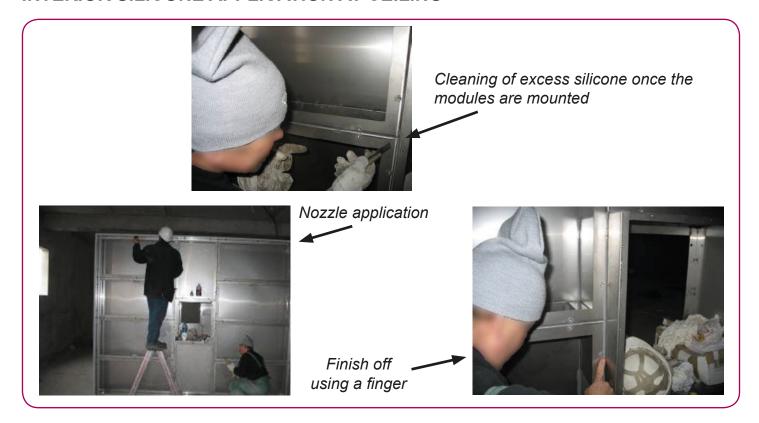

SILICONE APPLICATION POINTS

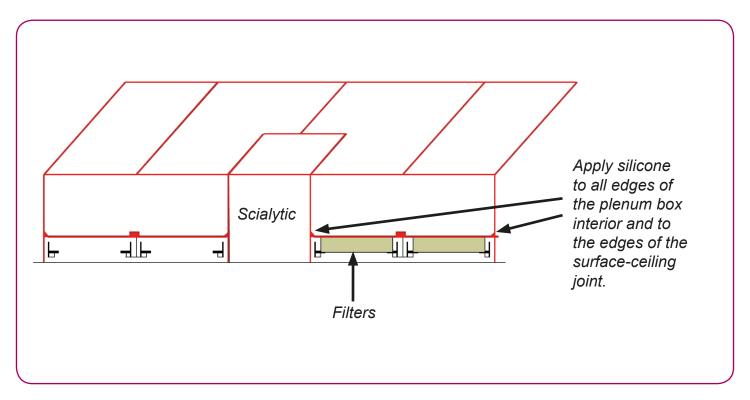



PROTECTIVE PLASTIC PLACEMENT

Cover the assembly with plastic when working, in order to keep the assembly as clean as possible; adhesive tape can be used and then removed




CEILING INSTALLATION, STEP 1: CEILING-TO-FLOOR CENTERING




Clean the floor

Position the laser at the middle of the panel

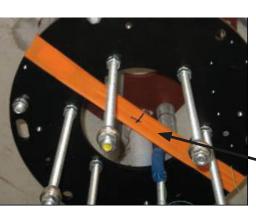


Locate the middle of the scialytics (middle of ceiling)

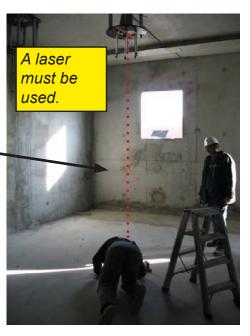



CEILING INSTALLATION, STEP 2: IDENTIFICATION OF ANCHORAGE POINTS

Place the ceiling on the floor, centered with respect to the lamp and aligned with the walls..

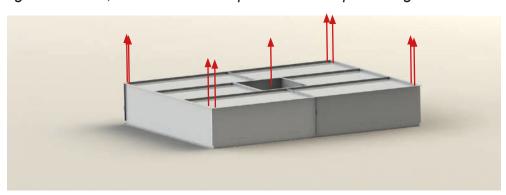

The anchorage holes should be matched up and the laser used to mark the start and end holes of each dimension in the ceiling (all other holes have a 200-mm spacing)

CEILING INSTALLATION, STEP 3: MATCH THESE POINTS UP TO THE CEILING AND INSERT THREADED ATTACHMENT RODS





CEILING INSTALLATION, STEP 4. PANEL HOISTING TO CEILING



1 - Place the panel in its position

2 - Tilt the panel over the elevation area





3 - Raise the panel simultaneously to its position, making sure that the rods are properly inserted into the anchorage points

CEILING INSTALLATION, STEP 5: FILTRATION PANEL ATTACHMENT



Safety attachment supports
Careful!!
maintain the elevation system





Attach with washers and nuts






INSTALLED CEILING




FILTER INSTALLATION, STEP 1: REMOVE PERFORATED PLATE

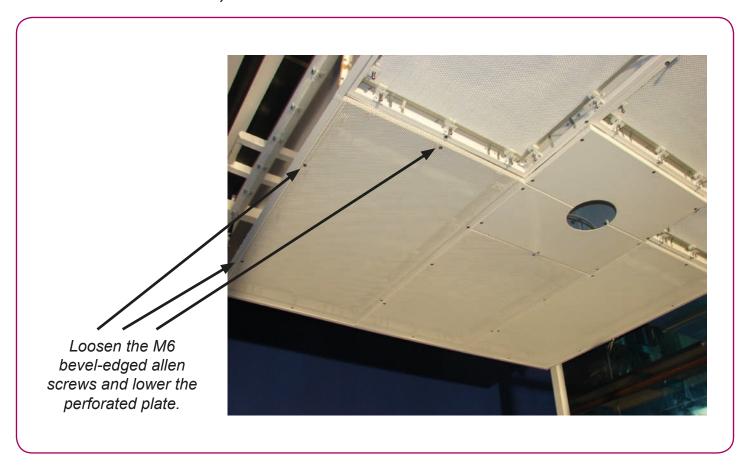




FILTER INSTALLATION, STEP 2: FILTER PLACEMENT

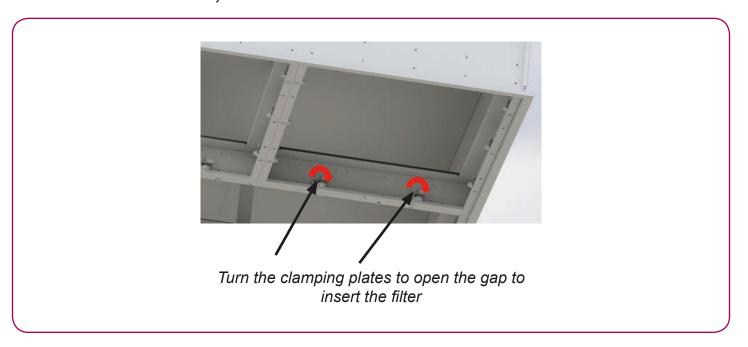


FILTER INSTALLATION, STEP 3: CLAMPING MECHANISMS

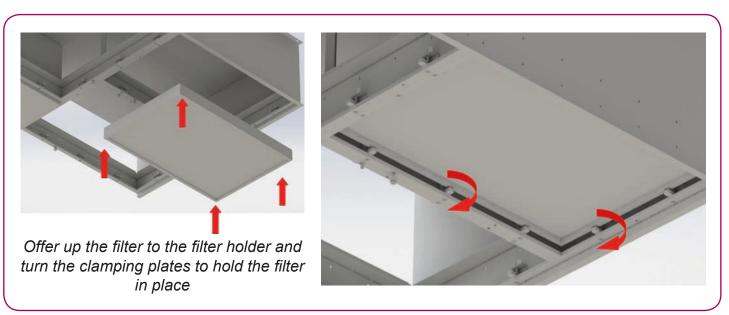




FILTER INSTALLATION, STEP 4: FILTER CLAMPING

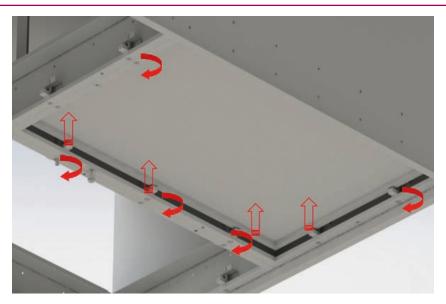

Tighten the M8 bolts, alternating between the bolts, until the filter is evenly held over its entire surface. The clamping plate will rise (tighten). The tightening length will depend on the filter seal.

FINISHED CEILING: PERFORATED PLATE PLACEMENT.

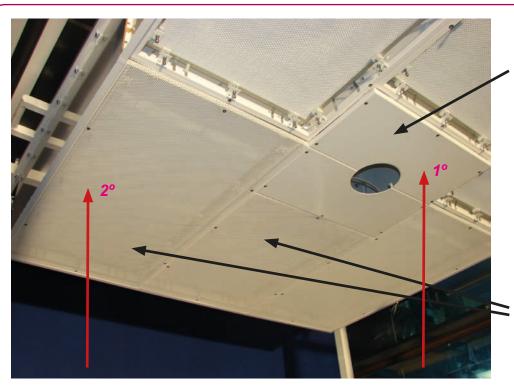

First place the middle plates, surrounding the lamp by using the M6 stainless screws supplied

Second, position the perforated plates using the M6 stainless bevel-headed screws supplied.





KOOLAIR, S.A. (Spain)

Calle Urano, 26

Polig. Ind. nº 2 – La Fuensanta 28936 Móstoles (MADRID)

Tel: +34 91 645 00 33 Fax: +34 91 645 69 62

e-mail comercial: comercial@koolair.com

e-mail Koolair: info@koolair.com

www.koolair.com

Koolair, S.A. reserves the right to change publisher datas and drawings at any time without prior notice written.