


KoolAIR



Absolute filter holder
plenum

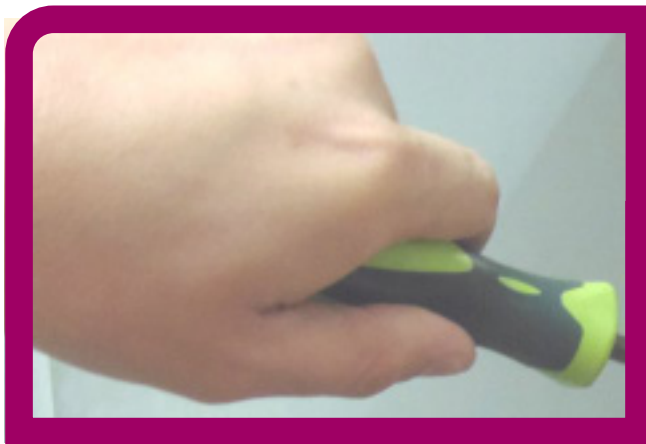


KPA



Mounting
instructions

www.koolair.com

KPA absolute filter holder plenum Mounting instructions

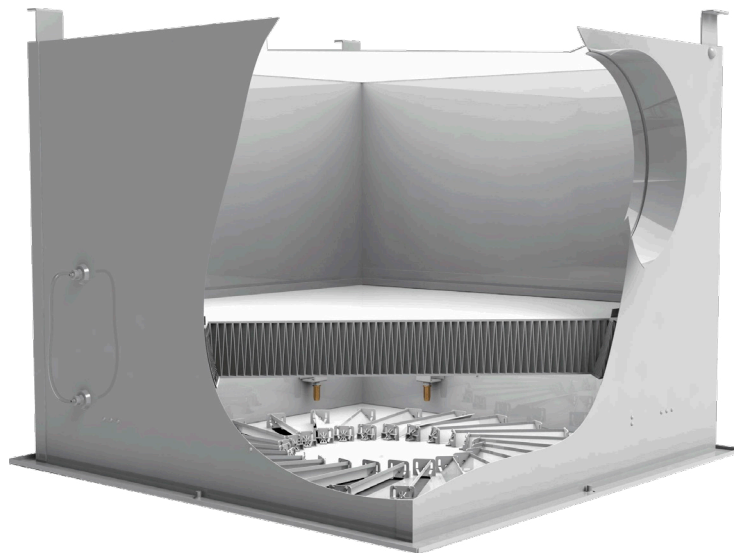

KPA

Mounting instructions

To mount the KPA plenum box:

1.- Check the KPA absolute plenum is in the correct location.

In order to correctly install the filter, the KPA absolute plenum must be correctly installed with the pressure tapping fitted.



2.- Check the mounting components. Before fitting the filter, the filter mounting components should be checked. The following are required to mount the filter:

- Pressure tapping set with fitting, nut and connecting tube.
- Set of clamps to hold the filter.

3.- Mounting the filter.

Remove the tube and the nut from the pressure tapping and leave only the fitting fitted to the plenum.

While protecting the fitting, insert the filter and press the straps so that the filter is pressed against its horizontal support, being held in place by the straps.



KPA

Mounting instructions

4.- Mounting the clamps.

With the filter in place, fit the clamping elements to the plenum guides. The number of guides will vary depending on the size of the plenum.

With the clamping element correctly positioned, tighten the nut to secure the filter support in the KPA absolute plenum.

Make sure the clamping element is properly secured. Finally, fit the pressure tapping elements that were removed in section 3.



5.- Removing the pressure tapping.

To disassemble the filters, follow the above procedure in reverse. First, unscrew the pressure tapping leaving only the fitting attached to the plenum box.

6.- Disassembling the connecting parts.

Unscrew the connecting parts and remove them by sliding them out of the guide.



KPA

Mounting instructions

7.- Removing the filter.

Unscrew the connecting parts and remove them by sliding them out of the guide.



THIS CATALOG IS INTELLECTUAL PROPERTY.

The partial or total reproduction of its contents is forbidden without the express and authoritative authorisation of KOOLAIR, S.L.

CEN-IMKPA-1217-00



KOOLAIR, S.L. (Spain)

Calle Urano, 26

Polig. Ind. nº 2 – La Fuensanta

28936 Móstoles (MADRID)

Tel: +34 91 645 00 33

Fax: +34 91 645 69 62

e-mail comercial: comercial@koolair.com

e-mail Koolair: info@koolair.com

www.koolair.com

Koolair, S.L. reserves the right to change publisher datas and drawings at any time without prior notice written.